


FIX-A-CHIP REPAIR KIT INSTRUCTIONS

LTR105

FOR REPAIRING MINOR DAMAGES IN WOOD AND PLASTIC LAMINATE MATERIALS


1. PREPARE THE DAMAGE

Clean the damaged spot with a non-soapy cleaner. Rubbing alcohol works great for this purpose. Remove any rough edges or splinters by carefully sanding the damaged area with a light grained sandpaper (included in kit).

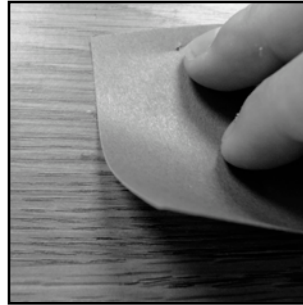


2. MIX THE COLORS

Use the white plastic spatula to apply compound. The 7 colors in the kit are the repair compound colors. If one is a close match to your material, use it directly. If you have to mix your color, follow the included color mixing guide, mixing the colors in the Mixing Bottle provided.

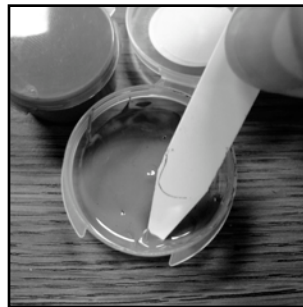


3. APPLY THE COMPOUND

Apply the repair compound as evenly as possible into the damaged area, removing the excess. It is best to apply the compound in layers, allowing each layer to completely dry before adding the next layer. Two or three layers may be necessary. Smooth application is very important for a quality repair job. Once completely dry, sand smooth and even with a very fine sandpaper, if necessary.

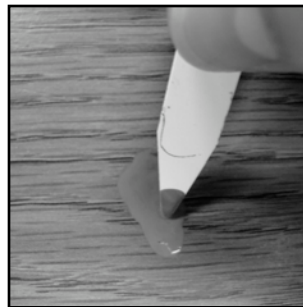

4. GETTING A TEXTURED FINISH

If a textured finish is desired on the repair, follow these instructions. Otherwise, you may skip this step. Immediately after applying your final coat, a grain paper is applied to apply texture to the repair. Select the grain paper that most closely matches the texture of the article you are repairing. Then, keeping "this side up", place the paper directly on top of the repair compound you have just applied, with the printed side up. Allow to dry overnight. Of possible, apply pressure to the repair as it dries, using a book, magazine, or other flat, weighty implement.

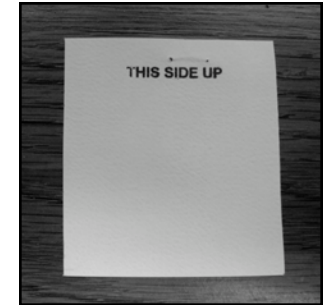

6. FINISHING

After drying, slowly peel off the grain paper. If more repair compound is needed due to inadequate filling, repeat the above process.

LifeTime Repair, LLC
P.O. Box 72
Doylestown, Ohio 44230

(330) 706-9791
www.lifetimerepairkits.com

LIFETIME *Repair Kits*